

171BPR

Brand: Pursuit
Product Code: 171BPR
Availability: In Stock
UPC: 044476131134
FCC ID: ELVATNG
MPN: 171BPR
Location: Cleveland, Ohio

Price: \$26.99

Short Description

Pursuit 1-Way 1-Button Remote Control

Description

New Pursuit 171BPR 1-Way 1-Button Remote Control Transmitter

Original Pursuit 171BPR 1-button remote control transmitter. Are you looking for a replacement Pursuit remote control for your system or just need an additional remote control? Buy with confidence from Access 1 Alarm and Audio!

This remote control is from the original manufacturer ensuring that you are receiving a genuine product made for your system.

Made for the following Pursuit/Prestige TYPE 20 systems:

- APS25E
- APS501E
- APS57E
- APS901E
- APSRS1Z
- APSRS3Z
- PR1B
- PR71B
- PRO9051Z
- PRO9056E

- PRO9556E
- PRO9644E

Replaces or works with the following Pursuit/Prestige remotes:

- 141BP
- 141BPR
- 143BP
- 143BPR
- 145BP
- 171BP
- 171BPR
- 173BP

Please make sure you have a working control unit installed in the vehicle prior to ordering this remote control. Programming instructions are included in the package and will require accessing your valet/programming switch located on your antenna.

Programming

Standard Programming: This method is used to program additional or replacement transmitters. Before you begin, have all transmitters which are to operate the system at hand.

1. Turn the ignition key to the on position.
2. Press and release the valet/programming switch 3 times (Siren Chirps).
3. Press the START Button of each transmitter you want programmed until you hear a chirp from the horn or siren.
4. Turn the ignition switch off.

The above action programs the Lock, Unlock, Start/Trunk, and Option 1 buttons which are typical for most systems. For additional channel programming beyond the option 1 button, please reference your owners manual.

Please contact us if you have any questions.

Programming Instructions

Programming

Standard Programming: This method is used to program additional or replacement transmitters. Before you begin, have all transmitters which are to operate the system at hand.

1. Turn the ignition key to the on position.
2. Press and release the valet/programming switch 3 times (Siren Chirps).
3. Press the START Button of each transmitter you want programmed until you hear a chirp from the horn or siren.
4. Turn the ignition switch off.

The above action programs the Lock, Unlock, Start/Trunk, and Option 1 buttons which are typical for most systems. For additional channel programming beyond the option 1 button, please reference your owners manual.

Please contact us if you have any questions.

Specification

Remote Control	
Battery Type	CR2032
FCC ID	ELVATNG
Frequency	434Mhz
Range	1/4-MILE
1-Way or 2-Way	1-WAY