

474T



Brand: Directed

Product Code: 474T - 7147VS

Availability: 4

UPC: 93207004742

FCC ID: EZSDEI474

MPN: 474T - 7147VS

Location: Cleveland, Ohio

Price: \$52.99

Short Description

1-Way 4-Button Remote Control

Description

Brand NEW Packaged Viper 7147VS 1-Way 4-Button Remote Control Replacement Transmitter Replacing Discontinued Avital, Hornet, Python, Designtech, Clifford, Valet and Viper 3 OR 4-Button Remote Controls

Looking for a replacement 4-button remote control for your system or just need an additional remote control? Buy from Access 1 Alarm and Audio!

NOTE: The Viper 7147VS has the asterisk star (*) button on it instead of the remote start icon. If you want the remote start icon instead of the star please order the Viper 7147V remote control here:

[CLICK HERE TO PURCHASE IN OUR STORE](#)

Whether you're replacing a lost remote or adding an extra for convenience, this 717VS is the perfect solution. Shop with confidence at Access 1 Alarm and Audio — where you'll receive a, **GENUINE** remote control direct from the original manufacturer. No knock-offs. No reprogrammed returns. Just authentic Viper quality.

What you will receive:

- 7147VS 1-Way VIPER Remote Control
- Programming Instructions

Works with the following Viper systems

- 130XV
- 350HV
- 426V
- 561V
- 3100V
- 3100VX

Works with the following AstroStart system

- VSS-204

Works with the following Avital systems

- 3100
- 3100L
- 4000XL
- 4400
- 830012
- 834001

Works with the following Boa systems

- 500
- 500B

Works with the following Clifford systems

- CS5000

Works with the following Designtech systems

- 20095

Works with the following Hornet system

- 554T
- 562T
- 563T
- 740T
- 742T
- 745T

Works with the following Merlin systems

- 225T
- 3000

Works with the following Python systems

- 426P
- 460 HP
- 561P
- 1200 HP

Works with the following Rattler systems

- 110D
- 210D
- 310D
- 312R
- 322R
- 332R
- 369D
- 369R

Works with the following Sidewinder system

- 740T

Works with the following Valet system

- 554T
- 561R
- 562T
- 563T
- 712T
- 716T

Works with or replaces the following remote controls

- 473AL
- 473B
- 473L
- 473M
- 473P
- 473R
- 473S
- 473T
- 473V
- 474A
- 474L
- 474P
- 474S
- 474V
- 476A
- 476L
- 476P
- 476S
- 476V
- 514TX
- 7131X
- 7133L
- 7143M
- 7145A

Please make sure you have a working control unit installed in the vehicle prior to ordering this remote control. Programming instructions are included with the package and will require accessing your valet/programming push-button switch

usually hidden under the drivers side dashboard area. Video instructions will be available on our YouTube page under remote controls. Please contact us if you have any questions.

Need the valet and programming switch? Don't forget to add it to the cart when checking out.

Why buy from us? Well, we are the experts that only believe in perfection, from the quality of our images to the accurate description in each and every listing. We are a Viper Diamond Dealer for over 20 years.

Programming Instructions

Programming Your Remote Control

Note: Make sure the system is disarmed, and the LED is off a minimum of 60-seconds prior to beginning the remote pairing process.

Preparing the system that HAS remote start

1. Open drivers door
2. Turn the ignition ON.
3. Within 10-seconds, press and release the valet and programming button once, then press and hold it. The status LED begins flashing and the siren/horn (if connected) sounds to confirm the system is ready for pairing. **DO NOT LET GO OF THE SWITCH**
4. Press the "LOCK" button of the 7147VS transmitter. The vehicles horn/siren will honk if connected. You have now successfully learned the remote to the vehicles remote start system.
5. Turn the ignition OFF and WAIT approximately 60 seconds.

Preparing the system that DOES NOT have remote start

1. Open drivers door
2. Turn the ignition ON.
3. Within 10-seconds, press and release the valet and programming button seven times, then press and hold the button (on the 8 press you are holding it depressed). The status LED begins flashing and the siren/horn

(if connected) sounds to confirm the system is ready for pairing. DO NOT LET GO OF THE SWITCH

4. Press the "LOCK" button of the 7147VS transmitter. The vehicles horn/siren will honk if connected. You have now successfully learned the remote to the vehicles remote start system.
5. Turn the ignition OFF and WAIT approximately 60 seconds.

Specification

Remote Control	
Works With Antenna(s)	543H, 543R, 544N, 544T, 6102T
Battery Type	CR2032
FCC ID	EZSDEI474
Frequency	434Mhz
Range	1/4-MILE
1-Way or 2-Way	1-Way