

7147L PAIR



Brand: Avital
Product Code: 7147L-PAIR
Availability: 2
UPC: 044476161469
FCC ID: EZSDEI7146
MPN: Avital 7147L - PAIR
Location: Cleveland, Ohio

Price: \$74.99

Short Description

Avital 1-Way Remote x2

Description

Introducing A Brand NEW Pair Avital 7147L 1-Way Remote Control Transmitters Replacing The Discontinued Avital 473L, 474L, 476L, 7133L and 7143L Remote Controls.

Upgrade your Avital security, keyless entry, remote start or security with remote start system with the newly redesigned Avital 7147L 1-Way remote control, built to pair seamlessly with the latest Avital Security and Remote Start system along with the Digital DS3 - DS4 Systems.

The new Avital 7147L remote features a sleek, slimmed-down design for enhanced comfort and everyday convenience. It's built to last, with a reinforced key ring that better resists breakage seen on previous generation remotes for improved durability and long-term reliability. The intuitive button layout offers quick, effortless access, delivering a more streamlined and user-friendly experience.

Whether you're replacing a lost remote or adding an extra for convenience, this PAIR of 7147L is the perfect solution. Shop with confidence at Access 1 Alarm and Audio, where you'll receive a brand-new, **GENUINE PAIR** of remote controls direct from the original

manufacturer. No knock-offs. No reprogrammed returns. Just authentic Avital quality.

What you will receive NEW

- Pair (2) of NEW Avital 7147L Remote Controls
- Programming Instructions
- Updated Owner's Guide
- Avital Security Stickers

Works with the following Avital systems:

- 2000
- 2100
- 2101
- 2101L
- 2103L
- 2200
- 2300
- 3100
- 3100L
- 3100LX
- 3103
- 3103LX
- 3200
- 3300
- 3300L
- 3305L
- 3308L
- 4000
- 4100
- 4103
- 4103LX
- 4105L
- 4108L
- 4109L
- 4308L
- 5103
- 5103L
- 5105
- 5105L
- 5108L

- 5303
- 5303L
- 5308L
- 5305
- 5305L
- 808301
- 820001
- 821001
- 822001
- 830002
- 831001
- 831002
- 832001
- 832002
- 833002
- AVISTART 3100
- AVISTART 3200
- AVISTART 3300
- AVISTART 4000
- AVISTART 4100
- AVISTART 4200
- AVISTART 4300
- D9143L
- D9147L
- DS3
- DS3+
- DS4
- DS4+
- HURRICANE 3

Will replace or work with the following Avital remote controls

- 473L
- 474L
- 476L
- 7133L
- 7147L
- 7147LS
- 7147LSEC
- 820020
- 820021

- 820031
- 820041

Please make sure you have a working control unit installed in the vehicle prior to ordering this remote control. Programming instructions are included with the package and will require accessing your valet/programming switch. Video instructions will be available on our YouTube page under remote controls.

The Valet/Programming Switch is either the push-button that is on the windshield mounted antenna or is a black push-button hidden under your dashboard that the technician should have showed you when the system was installed. If you can't find it, you will have to look under the drivers side dash for the system brain. On the side of the brain is a blue 2 pin port that has a thin gauge grey wire and a black with a grey stripe. Follow those wires to you end into the pushbutton. This is the button that will need accessed to program your remote controls. Is the blue port empty? Then you will need to purchase the valet/programming switch [CLICK HERE TO PURCHASE IN OUR STORE](#)

Programming Your Remote Control - OLD SYTEMS - No windshield mounted antenna with blue LED and programming switch incorporated on it

Note: Make sure the system is disarmed, and the LED is off a minimum of 60-seconds prior to beginning the remote pairing process.

Preparing the system that HAS remote start

1. Open drivers door
2. Turn the ignition ON.
3. Within 10-seconds, press and release the valet and programming button once, then press and hold it. The status LED begins flashing and the siren/horn (if connected) sounds to confirm the system is ready for pairing. **DO NOT LET GO OF THE SWITCH**
4. Press the "LOCK" button of the transmitter. The vehicles horn/siren will honk if connected. You have now successfully learned the remote to the vehicles remote start system.
5. Turn the ignition OFF and WAIT approximately 60 seconds.

Preparing the system that DOES NOT have remote start

1. Open drivers door
2. Turn the ignition ON.
3. Within 10-seconds, press and release the valet and programming button seven times, then press and hold the button (on the 8 press you are holding it depressed). The status LED begins flashing and the siren/horn (if connected) sounds to confirm the system is ready for pairing. **DO NOT LET GO OF THE SWITCH**
4. Press the "LOCK" button of the transmitter. The vehicles horn/siren will honk if connected. You have now successfully learned the remote to the vehicles remote start system.
5. Turn the ignition OFF and WAIT approximately 60 seconds.

Programming Your Remote Control - NEWER SYTEMS - With windshield mounted control center that incorporates the blue LED and programming switch

Note: Make sure the system is disarmed, and the LED is off a minimum of 60-seconds prior to beginning the remote pairing process.

Preparing the system that HAS remote start

1. Open drivers door
2. Turn the ignition ON.
3. Within 10-seconds, press and release the windshield mounted valet and programming button once, then press and hold it. The status LED begins flashing and the siren/horn (if connected) sounds to confirm the system is ready for pairing. **DO NOT LET GO OF THE SWITCH**
4. Press the "LOCK" button of the transmitter. The vehicles horn/siren will honk if connected. You have now successfully learned the remote to the vehicles remote start system.
5. Turn the ignition OFF and WAIT approximately 60 seconds.

Preparing the system that DOES NOT have remote start

1. Open drivers door
2. Turn the ignition ON.
3. Within 10-seconds, press and release the windshield mounted valet and programming button seven times, then press and hold the button (on the 8 press you are holding it depressed). The status LED begins flashing and the siren/horn (if connected) sounds to confirm the system is ready for pairing. **DO NOT LET GO OF THE SWITCH**
4. Press the "LOCK" button of the transmitter. The vehicles horn/siren will honk if

connected. You have now successfully learned the remote to the vehicles remote start system.

5. Turn the ignition OFF and WAIT approximately 60 seconds.

Preparing the system that has a Digital DS3, DS4, 4X10, 5X10 or DB3 system installed

1. Open drivers door
2. Turn the ignition ON.
3. Within 10-seconds, press and release the windshield mounted valet and programming button once, then press and hold it. The status LED begins flashing and the siren/horn (if connected) sounds to confirm the system is ready for pairing.
4. Release the Programming Switch
5. Press the "LOCK" button of the transmitter. The vehicles horn/siren will honk if connected. You have now successfully learned the remote to the vehicles remote start system.
6. Turn the ignition OFF and WAIT approximately 60 seconds.

Programming Instructions

Please make sure you have a working control unit installed in the vehicle prior to ordering this remote control. Programming instructions are included with the package and will require accessing your valet/programming switch. Video instructions will be available on our YouTube page under remote controls.

The Valet/Programming Switch is either the push-button that is on the windshield mounted antenna or is a black push-button hidden under your dashboard that the technician should have showed you when the system was installed. If you can't find it, you will have to look under the drivers side dash for the system brain. On the side of the brain is a blue 2 pin port that has a thin gauge grey wire and a black with a grey stripe. Follow those wires to you end into the pushbutton. This is the button that will need accessed to program your remote controls. Is the blue port empty? Then you will need to purchase the valet/programming switch [CLICK HERE TO PURCHASE IN OUR STORE](#)

Programming Your Remote Control - OLD SYTEMS - No windshield mounted antenna with blue LED and programming switch incorporated on it

Note: Make sure the system is disarmed, and the LED is off a minimum of 60-seconds

prior to beginning the remote pairing process.

Preparing the system that HAS remote start

1. Open drivers door
2. Turn the ignition ON.
3. Within 10-seconds, press and release the valet and programming button once, then press and hold it. The status LED begins flashing and the siren/horn (if connected) sounds to confirm the system is ready for pairing. **DO NOT LET GO OF THE SWITCH**
4. Press the "LOCK" button of the transmitter. The vehicles horn/siren will honk if connected. You have now successfully learned the remote to the vehicles remote start system.
5. Turn the ignition OFF and WAIT approximately 60 seconds.

Preparing the system that DOES NOT have remote start

1. Open drivers door
2. Turn the ignition ON.
3. Within 10-seconds, press and release the valet and programming button seven times, then press and hold the button (on the 8 press you are holding it depressed). The status LED begins flashing and the siren/horn (if connected) sounds to confirm the system is ready for pairing. **DO NOT LET GO OF THE SWITCH**
4. Press the "LOCK" button of the transmitter. The vehicles horn/siren will honk if connected. You have now successfully learned the remote to the vehicles remote start system.
5. Turn the ignition OFF and WAIT approximately 60 seconds.

Programming Your Remote Control - NEWER SYTEMS - With windshield mounted control center that incorporates the blue LED and programming switch

Note: Make sure the system is disarmed, and the LED is off a minimum of 60-seconds prior to beginning the remote pairing process.

Preparing the system that HAS remote start

1. Open drivers door
2. Turn the ignition ON.
3. Within 10-seconds, press and release the windshield mounted valet and programming button once, then press and hold it. The status LED begins flashing

and the siren/horn (if connected) sounds to confirm the system is ready for pairing. **DO NOT LET GO OF THE SWITCH**

4. Press the "LOCK" button of the transmitter. The vehicles horn/siren will honk if connected. You have now successfully learned the remote to the vehicles remote start system.
5. Turn the ignition OFF and WAIT approximately 60 seconds.

Preparing the system that DOES NOT have remote start

1. Open drivers door
2. Turn the ignition ON.
3. Within 10-seconds, press and release the windshield mounted valet and programming button seven times, then press and hold the button (on the 8 press you are holding it depressed). The status LED begins flashing and the siren/horn (if connected) sounds to confirm the system is ready for pairing. **DO NOT LET GO OF THE SWITCH**
4. Press the "LOCK" button of the transmitter. The vehicles horn/siren will honk if connected. You have now successfully learned the remote to the vehicles remote start system.
5. Turn the ignition OFF and WAIT approximately 60 seconds.

Preparing the system that has a Digital DS3, DS4, 4X10, 5X10 or DB3 system installed

1. Open drivers door
2. Turn the ignition ON.
3. Within 10-seconds, press and release the windshield mounted valet and programming button once, then press and hold it. The status LED begins flashing and the siren/horn (if connected) sounds to confirm the system is ready for pairing.
4. Release the Programming Switch
5. Press the "LOCK" button of the transmitter. The vehicles horn/siren will honk if connected. You have now successfully learned the remote to the vehicles remote start system.
6. Turn the ignition OFF and WAIT approximately 60 seconds.

Specification

| | |
|-----------------------|---|
| Remote Control | |
| Works With Antenna(s) | 544N, 548T, 6102T, 6112T, 6166T, 6213T, |

| | |
|----------------|----------------|
| | A6133T, A6167T |
| Battery Type | CR2016 (X2) |
| FCC ID | EZSDEI7146 |
| IC Number | 1513A-7146 |
| Frequency | 434Mhz |
| Range | 1/4-Mile |
| 1-Way or 2-Way | 1-Way |