

7147VS



Brand: Viper

Product Code: 7147VS

Availability: 2

UPC: 044476161490

FCC ID: EZS7147V

MPN: 7147VS

Location: Cleveland, Ohio

Price: \$53.99

Short Description

Viper 1-Way Remote Control

Description

**Introducing The NEW Viper 7147VS (security) 1-Way Remote Control Transmitter
Replacing The Viper 7141V, 7142V, 7145V and 7146V Remote Controls.**

Upgrade your Viper security or keyless entry system with the newly redesigned Viper 7147VS 1-Way remote control, built to pair seamlessly with the latest Viper Security systems along with the Digital DS3 - DS4 Systems.

The 7147VS (security) comes with an asterisk (*) on the bottom button and not the remote start icon.

The new Viper 7147VS remote features a sleek, slimmed-down design for enhanced comfort and everyday convenience. It's built to last, with a reinforced key ring that resists breakage and a screw-secured case for improved durability and long-term reliability. The intuitive button layout, positioned on the right side, offers quick, effortless access—delivering a more streamlined and user-friendly experience.

Whether you're replacing a lost remote or adding an extra for convenience, the 7147VS is the perfect solution. Shop with confidence at Access 1 Alarm and Audio — where you'll receive a brand-new, **GENUINE** remote control direct from the original manufacturer. No knock-offs. No reprogrammed returns. Just authentic Viper quality.

Works with the following Viper systems:

- DS3
- DS3+
- DS4
- DS4+
- DS4V
- DS4VP
- RESPONDER 350
- 150 ESP
- 160 XV
- 210 HV
- 211 HV
- 350+
- 350 PLUS
- 412V
- 416V
- 436V
- 438V
- 446V
- 500 HF
- 552V
- 560 XV
- 562V
- 563V
- 567V
- 571 XV
- 572V
- 650 XV
- 771 XV
- 850 XV
- 1000
- 1002
- 2103V
- 3000
- 3002
- 3100V

- 3101V
- 3102V
- 3103V
- 3105V
- 3106V
- 3107VM
- 3108V
- 3201V
- 3202V
- 3301V
- 3302V
- 3305V
- 3307VM
- 3308V
- 3400V
- 4103V
- 4103 XV
- 4105V
- 4107VM
- 4109V
- 5000
- 5002
- 5105V
- 5107VM
- 5108V
- 5305V
- 5307VM
- 5308V
- D9146V
- D9147V

Will also work with the following Clifford Matrix systems

- DS3
- DS3+
- DS4
- DS4+
- 3105X
- 3305X
- 4105X
- 4405X

- 5105X
- 5305X
- D9146X

Will also work with the following Python systems

- DS3
- DS3+
- 3102P
- 3105P
- 3202P
- 3302P
- 3305P
- 4105P
- 4403P
- 5105P
- 5305P
- 5403P
- D9145P

Please make sure you have a working control unit installed in the vehicle prior to ordering this remote control. Programming instructions are included with the package and will require accessing your valet/programming switch. Video instructions will be available on our YouTube page under remote controls.

The Valet/Programming Switch is either the push-button that is on the windshield mounted antenna or is a black push-button hidden under your dashboard that the technician should have showed you when the system was installed. If you can't find it, you will have to look under the drivers side dash for the system brain. On the side of the brain is a blue 2 pin port that has a thin gauge grey wire and a black with a grey stripe. Follow those wires to you end into the pushbutton. This is the button that will need accessed to program your remote controls. Is the blue port empty? Then you will need to purchase the valet/programming switch at checkout under Available Options.

Why buy from us? Well, we are the experts that only believe in perfection, from the quality of our images to the accurate description in each and every listing. We are a Premium Viper Diamond Dealer for over 20 years.

Programming Instructions

General Programming

Older systems

1. Open the vehicle door and keep open during programming
2. Turn the ignition on
3. Press the valet/programming switch once or if you have an alarm only system then press 7 times
4. Press and **HOLD** the valet/programming switch once more - Siren will chirp and the LED will flash
5. Press the **LOCK** button on each of the new transmitters - Siren will chirp once, confirming transmitter is learned to the system
6. Release the valet/programming button
7. Turn vehicle off

Newer digital systems

1. Open the vehicle door and keep open during programming
2. Turn the ignition on
3. Press the valet/programming switch once
4. Press and **HOLD** the valet/programming switch once more - Siren will chirp and the LED will flash
5. Release the valet/programming button
6. Press the **LOCK** button on each of the new transmitters - Siren will chirp once, confirming transmitter is learned to the system
7. Turn vehicle off

Specification

Remote Control	
Works With Antenna(s)	543X, 548T, 6102T, 6111T, 6112T, 6166T, 6167T, 6213T
Battery Type	CR2032
FCC ID	EZS7147V
IC Number	1513A-7147V
Frequency	434Mhz
Range	1/4-Mile+

1-Way or 2-Way

1-WAY